

## WARNING

- 1 You should learn the regulations of your country for carrying blank firing pistols.
- 2 When you take the pistol in your hand, you should control whether it is filled or not.
- 3 You should preserve your pistol far from the reach of children.
- 4 You should not fire from a short distance because of not to give harm to humans animals or plants.
- 5 While firing your pistol, you should keep it above the eye level and your arm has to be tight and must be on forward direction.
- 6 To take no effect from high sound you should use headphone.
- 7 The explosive material of the cartridge is dangerous for human health.
- 8 If you give the empty cartridges to the waste material collectors, it will be better for health and environment.
- 9 Our company has no responsibility for the modifications on the pistol or using the pistol out of it's real purpose.



[www.carreraarms.com](http://www.carreraarms.com)

**CARRERA**  
**GTR79**



## SPECIFICATION

Caliber	9 mm
Overall length	193 mm
Width	32,40 mm
Height	138 mm
Weight	900 g
Magazine capacity	17+1 pieces

## CLEANING (MAINTENANCE)

- 1 Keep your pistol away from dusty, damp and acidic environments.
- 2 After firing, lubricate and clean the chamber inside the barrel.
- 3 Lubricate the parts especially Slide and Magazine after cleaning.
- 4 Do not keep more than two cartridges inside the magazine, if you are not going to use for a long time.
- 5 In case the pistol does not work, use another brand cartridges. If the problem continues, please ask for help from the dealer where you bought the pistol. By using right hand finger thumb, press the magazine button backwards and at the same time pull the magazine downwards by your right hand. And take out the magazine completely from its housing. Fill the cartridges into the magazine. Push filled magazine in its house with the same direction again. Pull the slide of the pistol which is filled with cartridge backwards and release. With setting the cartridge to the barrel the pistol becomes ready for firing. From this time to press trigger is enough for firing. After 17 shots you must repeat the same process.

## SAFETY

To maintain the safety of your pistol, you should turn the safety downside

## TO DISMANTLE

Hold your pistol in safe position. Take out the magazine from its place. Turn the slide stop downside and take it out from its housing. "If the pistol isn't in safety position, you can't take the slide stop out." "Turn The take down batch as shown. And remove it from its place by pulling it out." After pulling slide to the end of backwards, lift the end of the slide up. With holding the same angle push the slide which escapes from the bearings of the frame forward. For maintenance there is no need to dismantle any other parts on the pistol. You can mount your pistol, by beginning from reverse side of dismantling steps of the pistol.

